

E-HUB HT-10R is designed to be quick and simple to setup. Just follow the quick start set up sequence and you will soon have total control over your home heating system.



Technical Data

Operating voltage: 5V
Operating current: 1A

Operating Connector: Micro USB Frequency: 868 Mhz Environment Temperature : $5^{\circ}\text{C} \sim 50^{\circ}\text{C}$


Dimensions: Φ65mmx 15mm

Color: White IP protection rating: 30

Wiring Connection

Connect the USB power supply to the Hub.



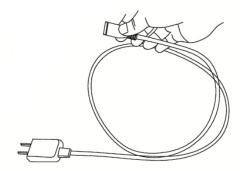

WIFI Connection

- 1. Mobile Phone is connected to WIFI. Ensure that the smart phone is within the same wifi network of the smart gateway.
- 2. Download and open the app. In the app store, search for "Smart Life" or scan QR code. If you are first time to use this app, please tap "Register" to register your account. If you already have an account, please click the "Login" button.



- 3. Open "My home" page of the app, and click "+"button on the upper right corner
- 4. Press "Others", then press "WIFI connector"
- 5. Long press WIFI connection button on gateway until LED flash quickly



- 6. Press "Confirm indicator rapidly blink" on phone.
- 7. Wait a moment till connection done. Now gateway is connected to app success.

WARRANTY CARD

DATA OF PURCHASE	
SHIPPING ADDRESS	
SIGNATURE/STAMP	
DAMAGE DESCRIPTION	
SERVICE COMMENTS	

FILL IN IF NEEDEED

(*) Cross incorrect by the cost of inverter repair du

I agree to pay the cost of inverter repair due to:
* expiration of the warranty period / * warranty void

Before proceeding with the repair, service will inform by phone about the exact costs of the repair.

Please attach a copy of the purchase document (receipt or invoice) to the complaint.

The full regulations of service repairs can be found on our website www.voltpolska.pl

