 
 


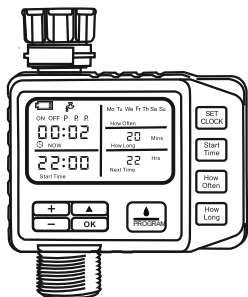

GARDEN PRO 200 DIGITAL HOSE END TIMER



CONTROL BUTTONS

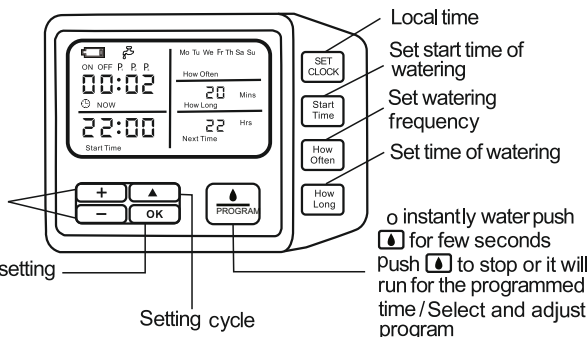

Maximum operating pressure: 80PSI For irrigation use only

INSTALLING THE BATTERY

 


2 x AA ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 2xAA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

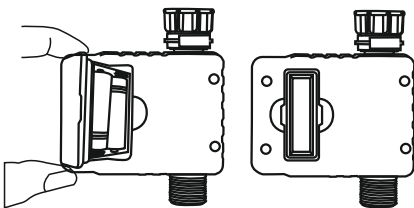

MAINTENANCE

 


Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time. In freezing conditions, un-install the timer and bring it indoors to prevent damage.

HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.

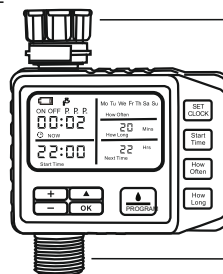

Timer inlet:
3/4 in. female
hose thread
with screen
washer

Timer outlet:
3/4 in. male
hose thread

A SETTING - DAY&TIME



Set the current time. Push **SET CLOCK** to select hours then push **▲** to set minutes, At last, Push **▲** to set which days. Adjust using **+** **-** to increasing or decreasing. After set, Press **OK** to confirm and save the setting.

B SETTING-START TIME



Set the first time watering. Press **▲** to „ON“ show in screen. When It show „ON“, the program is closed. Push **Start Time** to select hours then push **▲** to set minutes. Push **▲** again to set which days. Adjust using **+** **-** to increasing or decreasing. After set, Press **OK** to confirm and save the setting.

C SETTING - HOW OFTEN



Set watering frequency. Push **How Often** to select the watering days. press **▲** to the „Mo“ flash, this is setting Monday. Press **+** to keep or **-** to deactivate Do this for each day you would like to water. After setting press **OK** to confirm.

D SETTING - HOW LONG



Set the watering time

Push **How Long** to select the watering time

Adjust using **+** **-** to increasing or decreasing. (Watering frequency is 5-55s/per 5 seconds, 1-59 minutes/per 1 minute, 1-99 hour/per 1 hour)

After set, Press **OK** to confirm and save the setting.

E PROGRAMMING CYCLE

P₁



After P1 setting, Press **Program** to P2. Same setting as P1, After finish P2. Press **Program** again to P3 setting program.

F MANUEL OPERATION



To instantly water. Push **Program** 3seconds until **water drop icon** show in screen.

Then how long screen will flash. You can adjust water time by **+** **-**.

After setting. Press **OK** to confirm. then when time arrive, it will stop by itself.

When it is watering as automatic set. Press **Program** 3seconds, It can stop this time.

These operate will not influence the automatic setting.